Load paper error on Canon C5405 MFP printer/copier

The error light is flashing and the screen tells you to load paper when the drawers are full. May be a wrong size page sent to print.


1. Error light (bottom right) flashes



2. Turn Power button (top right) on



3. Press Status Monitor/Cancel button (bottom left)

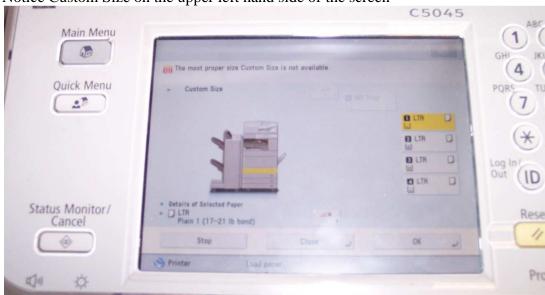

4. Notice Custom Size on the upper left hand side of the screen

- 5. Notice loaded paper size(s) on the right hand of screen
- 6. Select a loaded paper size (on this machine all are the same and the first tray is selected; choose another size/tray if your MFP has other choices and another tray is a closer match)
- 7. Press OK in the bottom right of the screen and the custom size will print on an available size paper

8. Brings you to Status Monitor/Cancel screen. Press OK. Press Power button to blank screen or don't press leave for next login.

